

AIRPORT DIAGRAM

BIRMINGHAM-SHUTTLESWORTH INTL (BHM)
AL-50 (FAA)
BIRMINGHAM, ALABAMA

ATIS 119.4 270.1
BIRMINGHAM TOWER 119.9 317.725
GND CON 121.7 348.6
CLNC DEL 125.675 305.2

D

RWY 06-24
PCN 65 F/C/X/T
S-175, D-205, 2D-350
RWY 18-36
PCN 45 F/C/X/T
S-75, D-170, 2D-240

33°35'N
33°34'N
33°33'N
MAG. VAR. 3.6° W
JANUARY 2020
ANNUAL RATE OF CHANGE
0.1° W

RESTRICTED ACCESS
(prior approval only)

FIELD
ELEV
650

ALABAMA ANG
LAHSO
LAHSO
ELEV 644
ELEV 634

860
860
FIRE STATION
RESTRICTED ACCESS
(prior approval only)

12007 X 150
TERMINAL
TWR 820

WEST FBO
ILS HOLD
ELEV 603
059.1°

HOLD AREA
CARGO RAMP

81
183.6°
0.7% DOWN
7099 X 150
ELEV 634
36
003.6°
B1
G1
EAST FBO

CAUTION: BE ALERT TO RUNWAY CROSSING CLEARANCES.
READBACK OF ALL RUNWAY HOLDING INSTRUCTIONS IS REQUIRED.

86°46'W

86°45'W

AIRPORT DIAGRAM

BIRMINGHAM, ALABAMA
BIRMINGHAM-SHUTTLESWORTH INTL (BHM)

SE-4, 25 FEB 2021 to 25 MAR 2021